**Summary:** As part of this conversion, the original AURALIC PSU will be replaced with a better quality hoerwege PSU. Soundproofing sheets will also be applied to the bottom, top and sides of the chassis to prevent unwanted resonances.

**Preparation:** Disconnect the Aries G1 from the mains/power outlet, then unplug all cables from the back panel. Place the unit on a desk or workbench with the feet facing upwards. Please be careful, as the housing can be easily scratched. Loosen the 8 screws on the bottom cover using a TORX T8 screwdriver and lift the bottom cover up by one of the feet. Put the bottom cover aside for the time being, as a soundproofing sheet will be applied to it later.

Figure 1: Opening the housing – lift the bottom (BACK = HINTEN, FRONT = VORNE).



**Disconnect** the white flat ribbon cable connecting the LCD on the front panel to the PCB. The socket has a "lock" which must first be opened before the cable can be pulled out of the socket. That lock, or a locking ribbon cable clip, is opened by carefully pulling up the plastic clip holding the cable in place (use your fingernails). Now, close the clip again so that nothing falls out of the socket. Roll up the flat cable or flip it over to the opposite side of the chassis so as not to damage it when installing the PSU.

**It might be** a good idea to take a photo of the old PSU before taking it out, making sure the connectors on the PSU are clearly visible in case you ever need to reverse the procedure.

#### **ARIES G1 hoer-wege PSU Installation manual**

**Pull the other 3 cables** out of their sockets; be careful to first release the clips and not apply too much force. Now you can remove the two screws on the voltage regulators at the bottom of the chassis using a TORX T10 screwdriver (it is the two pieces directly touching the chassis,) as well as the other 8 screws with which the PSU is held in place. Then the board can be removed from the chassis; see the picture below.



Figure 2: The AURALIC PSU removed.

The yellow arrows point at the small insulation sheets used for the voltage regulators, which are placed on the chassis as shown before the PSU is placed on top. The location of the recommended soundproofing using the provided bitumen sheets is indicated with orange arrows or orange text. The orange arrows indicate the location of the soundproofing on the sides of the chassis.

The soundproofing material is very effective, so do not apply more than absolutely necessary. The two narrow strips (approx. 2 x 8cm) on the left and right chassis walls, as well as the 3 pieces on the bottom are sufficient, in addition to the piece on the bottom cover removed earlier. Without the soundproofing material, the sound may tend to be too "bright" and become slightly unpleasant.


**Install** the hoer-wege power board into the chassis. Carefully position it on the standoffs, put in the screws, but do not tighten them completely. The control transistors can be bent slightly to align them with the screw holes in the chassis, see the photos next side.

Fig. 3 a, b + c: Positioning of the transistors on the chassis using a screwdriver such as a TORX T8.



The transistors are soldered in with some "play" and are flexible. They can be aligned over the screw holes with a screwdriver used as a lever (middle picture). Before securing the transistors with screws, place the insulation sheets underneath. There must be NO ELECTRICAL CONNECTION TO THE CHASSIS. Before powering up the unit, check with a multimeter, if possible, that there is NO conductivity between a screw holding the PSU in place and the silver part of either one of the two transistors. Finally, tighten all screws securely.

Figure 4: The hoer-wege PSU, installed.

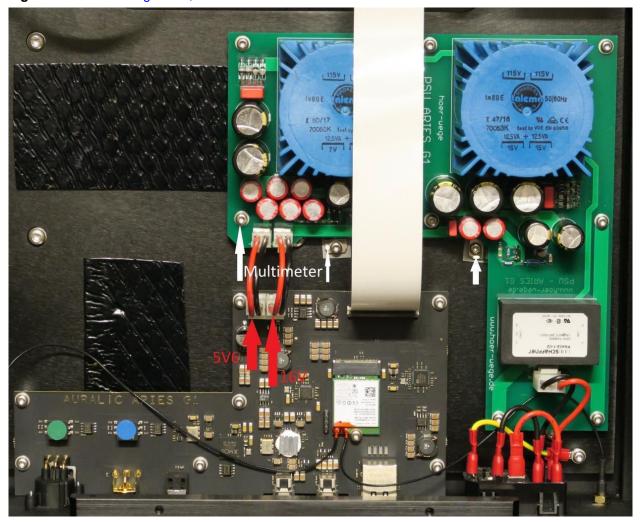


**Description:** The 120/230V AC connection is at the bottom right. ONLY insert this connector first. If you have a multimeter, you should now check that there is NO electrical connection between the metal "body" of the control transistors and the unit chassis. (Continued on next page)

Use the multimeter as a continuity tester, or with a low Ohm setting, and measure from the transistor to the chassis (any screw head). The multimeter should indicate a value in the mega-ohm range or "infinity". Now you should check safely whether the hoer-wege PSU is working properly. Simply connect the mains/power cable and switch it on. If the fuse did not blow, 2 green LEDs will light up on the hoer-wege PSU.

**Everything OK??** Then switch off the device, disconnect the mains/power cable, and connect the other two cables, 5V6 and 16V, to the PSU (the red cable must be on the left side, see picture on page 3). Finally, reconnect the white flat ribbon cable and close the clip, securing the cable in the socket. The 2-pole plugs are marked with the respective voltages, and can of course also be checked with a multimeter.

When everything is connected: Power up the ARIES G1 again. This time, the display should also light up after a short time, and the device should initiate the start-up routines. **Everything OK????** Then put the bottom cover with the soundproofing sheet applied back on, put the screws back in and tighten them. **The phase** is towards the top of the chassis at the mains input of the ARIES G1.

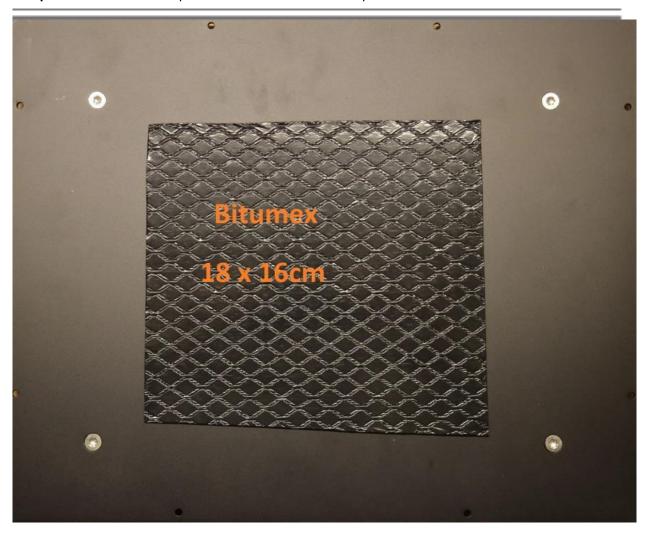

▶ By the way, the hoer-wege PSU is equipped with ultra-fast, soft recovery diodes instead of the 2 "unspeakable" bridge rectifiers, and with high-quality low-ESR designs instead of the inexpensive electrolytic capacitors. In addition, the "mundane" LM317 voltage regulators were replaced with a high quality discrete solution, with only a single 5A power transistor in the path. This elaborate solution is sonically superior to the LM317. In addition, the filter capacity was increased as far as possible and reasonable, so that energy can be provided for impulses faster, because music is dynamic! But: quality before quantity!

### HiFiWERKSTATT hoer-wege

### **ARIES G1 hoer-wege PSU Installation manual**

Page 5

- ▶ The installation of the new PSU must be carried out with close attention to the photos.
- ▶ It is essential that the transistors are fastened SECURELY and INSULATED from the chassis.

## The HiFiWERKSTATT hoer-wege

is not responsible for any damage happen by installing the hoer-wege PSU!!

**Hotline:** The HiFiWERKSTATT hoer-wege will be happy to answer your questions Monday - Friday from 15:00 - 19:00 (European Mean Time) at telephone number 0049-421647321 or better via email at hifiwerkstatt@ewe.net.

# Parts list of the hoer-wege conversion kit for ARIES G1

- Photos with markings and instructions provided as pdf-file,
- 1 x hoer-wege PSU, 1 x 2mm Bitumen approx. 25x25cm,

All information is provided without any guarantees. The current device may show minor changes.

All rights reserved. This manual is subject to copyright and remains the intellectual property of **HiFiWERKSTATT** hoer-wege. Imitation or publication, even in modified form, is expressly prohibited. Violations will be prosecuted.